# Datasheet M-Duino 57R+ DALI





# Technical Features CONECTABLE PLC ARDUINO 24Vcc M-DUINO

MODEL TYPE	M-Duino
Input Voltage	12 to 24Vdc (Fuse protection (2.5A) Polarity protection)
Input rated voltage	24Vdc
Rated Power	30 W
I max.	15A
Size	101x119.3x119.5
Clock Speed	16MHz
Flash Memory	256KB of which 8KB used by bootloader
SRAM	8KB
EEPROM	4KB
Communications	12C, Ethernet, USB, RS485, RS232, SPI , Max232-Max485-W5500, DALI
USB consideration!	Only for uploading or debugging. NOT connected as a serial Cannot be working in a final application

## General Features

Power supply voltage	DC power supply	12 to 24Vdc
Operating voltage range	DC power supply	11.4 to 25.4Vdc
Power consumption	DC power supply	30 W MAX.
External power supply	Power supply voltage	24Vdc
	Power supply voltage	700Ma
Insulation resistance	20MΩ min.at 500Vdc between the AC terminals and the protective earth terminal.	
Dielectric strength	2.300 VAC at 50/60 Hz for one minute with a leakage current of 10mA max. Between all the external AC terminals and the protective ground terminal.	
Shock resistance	80m/s2 in the X, Y and Z 2 times each.	direction
Ambient temperature (operating)	0° to 60°C	
Ambient humidity (operating)	10% to 90% (no condensa	tion)
Ambient environment (operating)	With no corrosive gas	
Ambient temperature (storage)	-20° to 60°C	
Power supply holding time	2ms min.	
Weight	597g max.	

# INPUTS (x12)

An/Dig Input 10bit

(0-10Vcc) - (x8)

	Rated Voltage: 10Vac 7 to 24Vdc 1 min: 2 to 12 mA Galvanic Isolation Rated Voltage: 24 Vdc
Digital Isolated Input (24Vcc) - (x0)	7 to 24Vdc I min: 2 to 12 mA Galvanic Isolation Rated Voltage: 24 Vdc
Interrupt isolated Input HS (24Vcc) * - (x4) * The Interrupt isolated Inputs can also work as Digital isolated Inputs	7 to 24Vdc I min: 2 to 12 mA Galvanic Isolation Rated Voltage: 24 Vdc

Expandability

I2C - 127 elements - Serial Port RS232/RS485



# DIGITAL/PWM OUT Industrial Shields M-Duino 57R+ DALI Ethernet controller ANALOG OUT DIGITAL IN SWITCH CONF. ISOLATED 050 SO 051 SI 052 SCI 0Reset 0 5V5do 0 Pin2 0 GND R0.8 R0.7 R0.6 R0.5 Zona B **]**R0.3 R0.4 **]** R0.2 **]**R0.1 (9999) IO.5 IO.4 IO.3 IO.2 Zona C R1.8 R1.7 R1.6 NC NC NC R1.5 R1.4 **]**R1.3 **]**R1.2 **]**R1.1 GND - 12.5 12.4 12.3 12.2 12.1 (-)12.1 12.0 (-)12.0 R2.7 R2.6 R2.5 **]**R2.3 R2.4 **]**R2.2 **]**R2.1 GND GND Vdc Vdc Analog: 0 to 10Vdc Digital: 5 to 24Vdc Digital: 5 to 24Vdo

# OUTPUTS (x31)

Analog Output 8bit

(0-10Vcc) - (x8)

- The Analog outputs can
also work as Digital outputs

Rated Voltage: 10Vac Digital Isolated I max: 70 mA
Galvanic Isolation
Diode Protected for Relay Output (24Vcc) -(x0) Rated Voltage: 24Vdc 220V Vdc Digital Isolated

Output Relay - (x23) I max: 5A Galvanic Isolation

Diode protected for Relay lmax 24Vdc: 410 mA

PWM Isolated

5 to 24Vdc Output 8bit (24Vcc) | I max: 70 mA Galvanic Isolation Diode Protected for Relay \* The PWM outputs can also Rated Voltage: 24Vdc work as Digital outputs







Performance Specifications

Arduino Board	Arduino Mega 2560
Control method	Stored program method
I/O control method	Combination of the cyclic scan and immediate refresh processing methods.
Programming language	Arduino IDE. Based on wiring (Wiring is an Open Source electronics platform composed of a programming language. "similar to the C")
Microcontroller	ATmega2560
	http://arduino.cc/en/Tutorial/HomePage

### Install Arduino IDE and the Industrial Shields boards

The steps to follow to install our equipment's to Arduino IDE are:

• Open the Arduino IDE, versión 1.8.0 or superior. If you don't have it yet , you can download here

https://www.arduino.cc/en/Main/Software.

- Press the "Preferences" option to "File" menu and open the preferences window.
- In the text box "Additional boards manager URLs", add the direction: http://apps.industrialshields.com/main/arduino/boards/package\_industrialshields\_index.json
- · Close the preferences window with the "OK" button.
- · Click on "Tools" menu, and open the "Boards" submenu, and click the "Boards Manager" option, to open the Boards Manager window.
- Search "industrialshields" to the search filter and select to the list and click "Install"
- Close the "Boards Manager". Once it is performed that steps, you are available to select each PLC that you wish to work on "Tools" -> "Boards" : M-Duino

To get more information:

https://www.industrialshields.com/first-steps-with-the-industrial-arduino-based-plc-s-and-the-panel-pc-s-raspberry-pi-based#boards

# Warnings



Unused pins should not be connected. Ignoring the directive may damage the controller.

Before using this product, it is the responsibility of the user to read the product's User Guide and all accompanying documentation.

Industrial Shields PLCs must be powered between 12Vdc and 24Vdc. If a higher voltage is supplied to the equipment can suffer irreversible damage.

Maintenance must be performed by qualified personnel familiarized with the construction, operation, and hazards involved with the control.

Maintenance should be performed with the control out of operation and disconnected from all sources of power.

The Industrial Shields Family PLCs are Open Type Controllers. It is required that you install the M-Duino PLC in a housing, cabinet, or electric control room. Entry to the housing, cabinet, or electric control room should be limited to authorized personnel.

Inside the housting, cabinet or electric control room, the Industrial Shields PLC must be at a minimum distance from the rest of the components of a minimum of 25 cm, it can be severely damaged.

Failure to follow these installation requirements could result in severe personal injury and/or property damage. Always follow these requirements when installing M-Duino family PLCs.

In case of installation or maintenance of the M-Duino please follow the instructions marked in the Installation and Maintenance section on the User Guide

Do not disconnect equipment when a flammable or combustible atmosphere is present.

Disconnection of equipment when a flammable or combustible atmosphere is present may cause a fire or explosion which could result in death, serious injury and/or property damage.

## Symbology

	Indicates that the equipment is suitable for direct current only; to identify relevant terminals
$\sim$	Indicates that the equipment is suitable for alternating current only, to identify relevant terminals
	To identify the control by which a pulse is started.
<u></u>	To identify an earth (ground) terminal in cases where neither the symbol 5018 nor 5019 is explicily required.
	To identify the switch by means of which the signal lamp(s) is (are) switched on or off.
C€	CE marking indicates that a product complies with applicable European Union regulations
<u> </u>	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury
4	To indicate hazards arising from dangerous voltages

## Technical Support

You can contact with us using the best channel for you:



support@industrialshields.com



www.industrialshields.com



Visit our Blog, Forum orTicketing system



34 644 927 900



Use our chat service



Check the user guides



Visit our Channel

